

## MBV Radio Monitor Controls Guide

Common Controls	
Valid for all pages	
+, =, Page Down	Cycles down a page, if possible
-, Page Up	Cycles up a page, if possible
Home	Jumps to Page 1
End	Jumps to last page
Up arrow	Move Cursor up
Down Arrow	Move Cursor Down
Return	Shows Info Page for cursor selected item
L, l	Show server log
M, m	Jump to Top Level
Q, q	Quit Radio Monitor
Z	Reset counters to zero

Top Levels Controls	
Valid only at Stats pages for the servers	
P	Continuously ping for servers
p	Single ping for servers
Spacebar	Toggle between single and continuous ping
Right Arrow	Move between servers
Left Arrow	Move between servers
A, a	Show HLA stats for a server
H, h	Show HF settings for a server

<b>Radio Controls</b>	
Valid only for pages within the Radio Server	
Tab	Increment Exercise ID
Shift Tab	Decrement Exercise ID
Right arrow	View In-tune page, again for in-tune detail page
Left Arrow	Move back from in-tune pages
A, a	Toggles HLA Names
D, d	Shows TDL stats (radio info page only)
F, f	Sort page by frequency
G, g	Jump to Guard Rx Page
I, i	Toggles Radio Names (local only)
N, n	Shows all radios on network
P, p	View propagation stats
R, r	View Receivers page
S	View stats for radio server (jump to top level)
s	View stats page for radio
T, t	View Transmitters page

<b>SATCOM Controls</b>	
Valid only for Satcom Server pages	
C, c	View channels
S, s	View stats

<b>HLA Controls</b>	
Valid only at HLA stats pages	
A, a	Toggle back to previous server page
J, j	Join Federation
R, r	Resign Federation