



Voisus Solo Quick Start Guide

Revision B
Version 2
January 2021
Document DOC-VS-SL-QSG-B-2

Advanced Simulation Technology inc.
500A Huntmar Park Drive ■ Herndon, Virginia 20170 USA
(703) 471-2104 ■ asti-usa.com

Product Name: Voisus

Voisus Solo Quick Start Guide

© Copyright ASTi 2021

Restricted rights: copy and use of this document are subject to terms provided in ASTi's Software License Agreement (www.asti-usa.com/license.html).

ASTi
500A Huntmar Park Drive
Herndon, Virginia 20170 USA

Red Hat® Enterprise Linux

Red Hat® Subscription

ASTi's software is designed to run on an installation of Red Hat® Enterprise Linux® client. This ensures optimal interoperability with ASTi's software, host routing software and external communications servers. As such included in the cold start DVDs is the complete installation of Red Hat® Enterprise Linux® client. This software is not activated to a current Red Hat subscription. It is the end users' responsibility to activate their subscription and connect to the Red Hat Network. The Red Hat subscription will provide the end user with support, maintenance, software and security updates. For details on Red Hat activation, go to the Red Hat web site:

www.redhat.com/apps/activate

Export Restriction

Countries other than the United States may restrict the import, use, or export of software that contains encryption technology. By installing this software, you agree that you shall be solely responsible for compliance with any such import, use, or export restrictions. For full details on Red Hat export restrictions, go to the following:

www.redhat.com/licenses/export

Revision history

Date	Revision	Version	Comments
10/7/2020	A	0	Initial baseline version.
11/11/2020	B	0	Streamlined installation process in "Installation."
11/16/2021	B	1	Made minor edits to "Import or export scenarios" and "Next steps" for clarity.
1/28/2021	B	2	Updated cross references to the Voisus Solo User Guide in "Next steps." Adjusted page margins in front matter.

Contents

1.0 Introduction	1
1.1 Required equipment	2
2.0 Installation	3
3.0 Licensing	4
3.1 Install a USB License Key	4
3.2 View licensing information	5
3.3 Update USB License Key(s)	7
4.0 Network Settings	9
5.0 Scenarios	10
5.1 Add a scenario	10
5.2 Import or export scenarios	11
6.0 Next steps	12

1.0 Introduction

Welcome to Voisus Solo™, a self-contained application that brings Voisus technology to your desktop. Solo's intuitive interface allows administrators and exercise controllers to configure the core communications requirements of any exercise. Set up simulated radios, intercoms, roles, and other functionality, creating a communications environment that meets your Modeling, Simulation, and Training (MS&T) needs. Available for Windows 10®.

Solo capabilities include:

- *Voice-over-IP (VoIP) clients*: voice communications for a variety of interfaces, including computer and tablet operations. These clients provide networked access to simulated radios, live Radio-over-IP (RoIP) communications, and VoIP calling.
- *Tactical radio simulation*: designed for hands-on radio experience at a fraction of the cost. Options include hardware panels for maximum physical realism and software skins for maximum affordability.

Solo's robust features combine seamlessly and scale to meet the needs of large and small exercises alike. Client operators connect wherever there is access to the network. Automated environmental sounds and radio traffic increase exercise realism and relieve busy instructors.

This quick start guide discusses the following topics:

- Installation
- Network Settings
- Licensing
- Scenarios

Once you have access to Solo, you can begin configuring communications and audio resources for your particular program.

1.1 Required equipment

To install the Voisus Solo application, you will need the following items:

- Voisus Solo Software Installation CD
- A Voisus USB License Key
- A computer running Windows 10
- A keyboard
- A mouse
- A USB headset

2.0 Installation

To install Solo on a Windows 10 operating system, follow these steps:

1. Insert the Voisus Solo Software Installation CD into your computer's CD/DVD drive.
2. Extract the executable (.exe) file from the CD to your desktop, and open **VoisusSoloSetup_N.N.N.exe**, where *N.N.N* is the version number.
3. (Optional) If you're using a software license, select **Software Licensing**.
4. Select and . Wait for installation to complete.

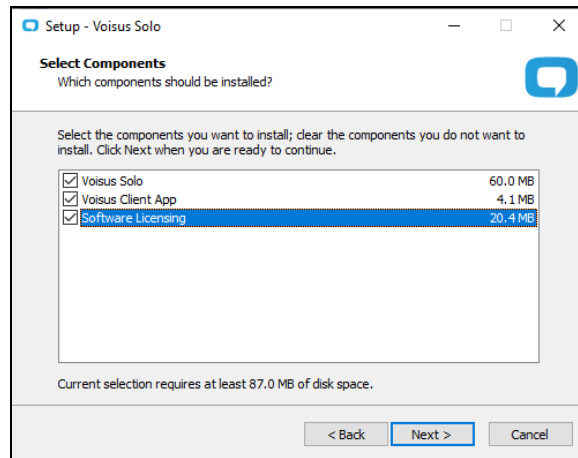


Figure 1: Setup - Voisus Solo wizard

5. When installation is complete, select .

3.0 Licensing

ASTi's licenses are tied to USB License Keys, which are DoD-approved devices covered under ASTi's Authority to Operate (ATO) and Risk Management Framework (RMF) accreditation. Upon delivery, each USB License Key activates a predefined set of software functionality for any system running software. This includes ASTi-provided hardware, customer-furnished equipment (CFE), government-furnished equipment (GFE), and virtual machines (VMs). USB License Keys also give you the ability to transfer functionality among systems and receive loaner and trial licenses. To learn more about USB License Key benefits and FAQs, go to "USB License Keys and your ASTi System" (support.asti-usa.com/appnotes/123.html).

This section discusses how to:

- Install a USB License Key
- View licensing information
- Update USB License Key(s)

3.1 Install a USB License Key

When you first receive an ASTi USB License Key with a shipment, you must install your license on the applicable Windows computer. If you're updating an existing license, follow the instructions in Section 3.3, "Update USB License Key(s)" on page 7.

To install a USB License Key and verify it is active, follow these steps:

1. Insert the USB License Key into the computer.
2. From the taskbar, go to **Show hidden icons** (⌵) > **Voisus icon** (🔵) > **Open Management Interface**.

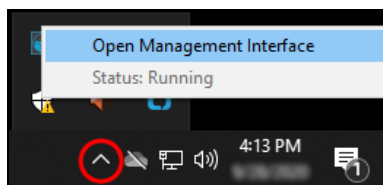


Figure 2: Open Solo

3. From the left, go to **Licensing**.

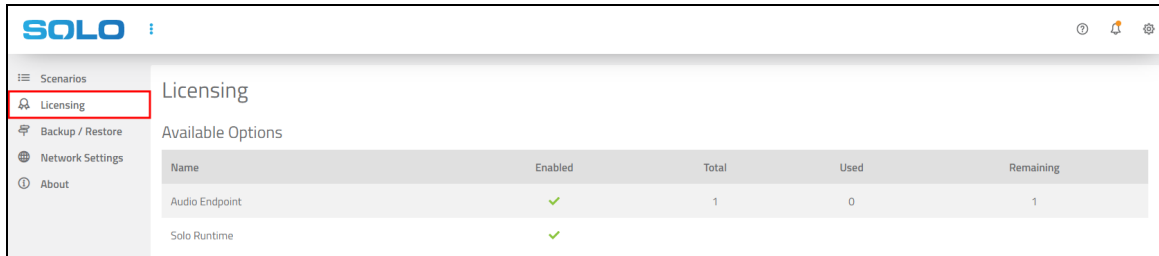


Figure 3: Licensing navigation

4. Under **Licenses (N)**, find the **License ID** to confirm that your license is active. This ID is printed on the tag attached to your USB License Key.

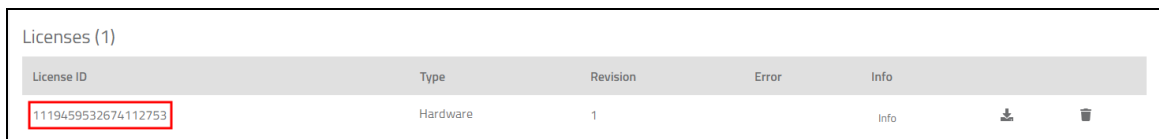


Figure 4: Active License ID

3.2 View licensing information

On **Licensing**, under **Available Options**, you can view a variety of information about licenses on your system:

- **Enabled:** enabled options (e.g., Voisus, Clients, Solo)
- **Total:** the total number of endpoints assigned to each option
- **Used:** the number of endpoints each option is using
- **Remaining:** the number of endpoints remaining to each option

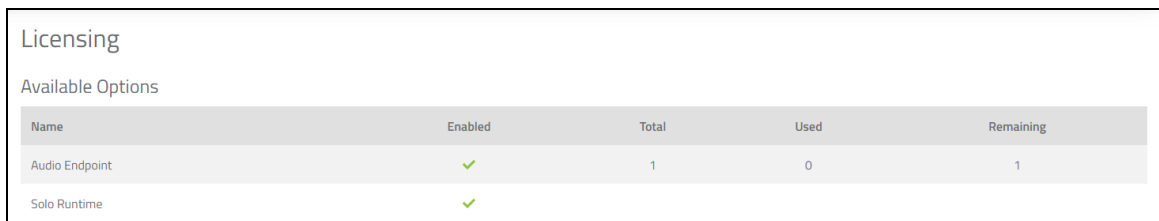


Figure 5: Available Options

A list of installed USB License Keys displays under **Licenses (N)**, where *N* represents the number of licenses. This table specifies the following:

- License ID
- License type (i.e., hardware or software)
- The date the license was generated
- Error messages

Figure 6, "Installed licenses" below shows an example of installed licenses:

Licenses (1)				
License ID	Type	Revision	Error	Info
1119459532674112753	Hardware	1		Info

Figure 6: Installed licenses

If a system is unlicensed, a warning displays at the top of the page. Minimum functionality may still be available on unlicensed systems. However, if you would like to use the application's full feature set, contact ASTi to update your USB License Key.

To view specific information about the license, select **Info**:

- **Name**: options enabled on this license.
- **Total**: shows the total number of endpoints per option.
- **Expired?**: indicates whether the option's capabilities have expired.
- **Expiration Date**: shows the option's expiration date (if applicable).
- **Error**: displays option-specific error messages (e.g., expiration).

Licenses (1)				
License ID	Type	Revision	Error	Info
1119459532674112753	Hardware	1		Info
Notes: [Redacted]				
Name	Total	Expired?	Expiration Date	Error
Audio Endpoint	1	No	1617321599	
Solo Runtime	1	No	1617321599	
This license is compatible with Solo 1.x software released April [Redacted] or earlier.				

Figure 7: Additional license information

3.3 Update USB License Key(s)

You may need to update ASTi USB License Key(s) to expand or alter system functionality (e.g., receive a software trial, add more clients). ASTi provides a License Key Update (.lku) file that you can upload to Voisus Solo. Updating a USB License Key or changing its license terms does not require returning it to ASTi. A single file can also update multiple keys.

To update USB License Key(s), follow these steps:

1. Insert the USB License Key(s) into a Windows computer hard disk drive.
2. From the taskbar, go to **Show hidden icons** (⬆) > Voisus icon (🔵) > **Open Management Interface**.

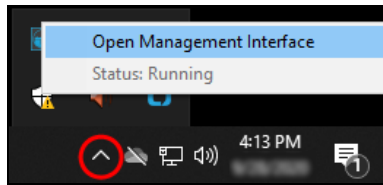


Figure 8: Open Solo

3. From the left, go to **Licensing**.

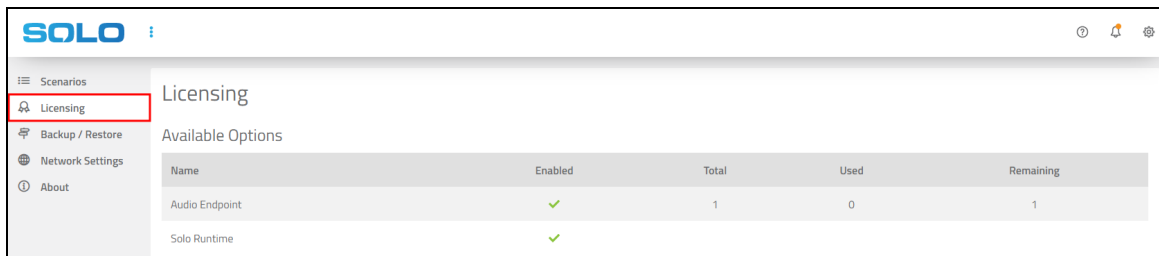


Figure 9: Licensing navigation

4. On **Licensing**, under **Update/Install a License**, select [Upload License](#), and find the License Key Update file on your local system. Alternatively, drag and drop the file to the browser.


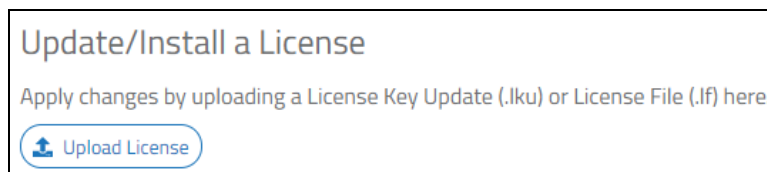


Figure 10: Update/Install a License

The updated License Key Update file displays under **Licenses (N)**, where N is the number of licenses.



The screenshot shows a table titled "Licenses (1)". The table has five columns: License ID, Type, Revision, Error, and Info. The first row contains the following data: License ID: 1119459532674112753 (highlighted with a red box), Type: Hardware, Revision: 1, Error: (empty), and Info: Info, with download and delete icons.

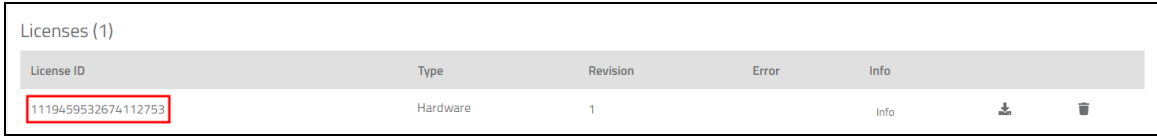

License ID	Type	Revision	Error	Info
1119459532674112753	Hardware	1		Info  

Figure 11: Updated license

4.0 Network Settings

To configure Voisus Solo's network settings, follow these steps:

1. From the left, go to **Network Settings**.

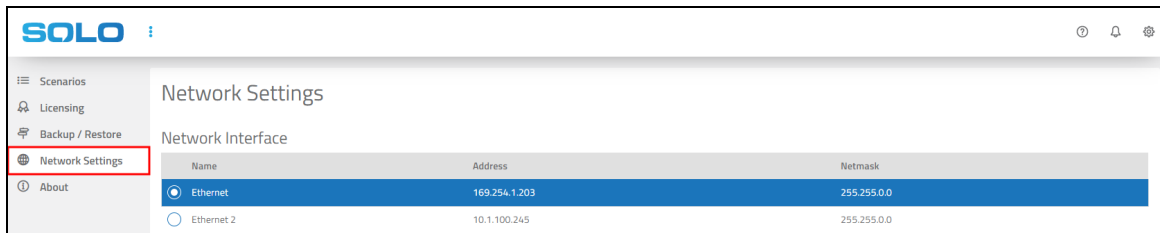


Figure 12: Network Settings navigation

2. Under **Network Interface**, choose the network interface connected to your desired network. Solo sends and receives all Distributed Interactive Simulation (DIS) traffic on this interface.

5.0 Scenarios

Each scenario contains customized communications and audio resources for Voisus clients, including the following:

- **Comm Plan:** a collection of virtual communications nets with customizable parameters, such as frequency, waveform modulation type, crypto, and frequency-hopping. Nets fill simulated radios with communication channels.
- **Roles:** each role is a collection of simulated radios, and each radio consists of one or more virtual nets from the Comm Plan. Roles are assigned to clients.
- **Clients: Client Management** maps each client to a role, DIS exercise, and other resources in the scenario.
- **DIS Settings:** set DIS options for a specific exercise.

Solo runs one scenario at a time, but you can dynamically edit scenarios while they are running. This section discusses how to:

- Add a scenario
- Import or export scenarios

5.1 Add a scenario

Before Voisus clients can communicate with each other, you must build and run a new scenario in Voisus Solo. To build and run a scenario, follow these steps:

1. From the taskbar, go to **Show hidden icons** (⤴) > **Voisus icon** (🔵) > **Open Management Interface**.

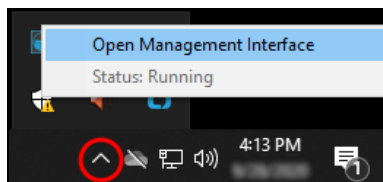


Figure 13: Open Solo

- Under **Scenario Management**, select the drop-down box, and choose a scenario template.

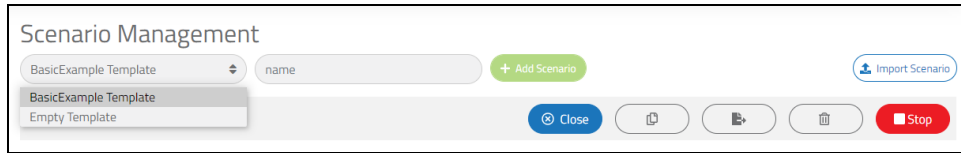


Figure 14: New scenarios

The example scenarios come with a Comm Plan, roles, and radios that you can modify as needed.

- In **name**, enter a unique name for the scenario.
- Select **+ Add Scenario**.
- Select **▶ Run** to run the scenario and **✎ Edit** to view/edit its resources. You can dynamically edit scenarios while they are running.

5.2 Import or export scenarios

The **Import Scenario** and **Export** buttons transfer scenarios between Solo and your computer's hard drive. As a result, you can easily share a scenario between Solo instances using email or another file-transfer method.

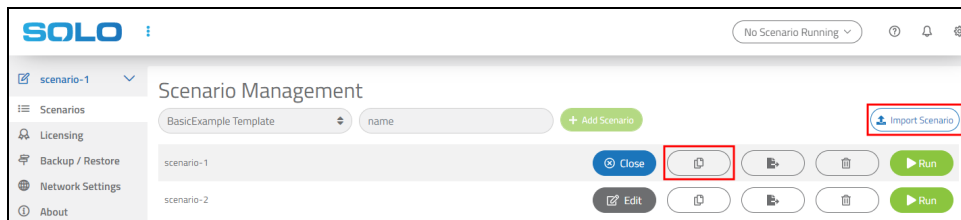


Figure 15: Scenario Import and Export

Scenarios receive a unique ID during an export. If Scenario A already exists on the destination system, and the destination system imports another copy of Scenario A, the system contains two separate instances of Scenario A, each with a unique scenario ID.

6.0 Next steps

After you set up licensing, network settings, and scenarios in Voisus Solo, you'll need to connect the Voisus Client for Desktops & Tablets to Solo. For more information, go to the *Voisus Solo User Guide*.

Solo scenario templates come with a preconfigured Comm Plan, a role, and multiple radios that allow you to communicate right away. However, Voisus also gives you the flexibility to customize your assets to best suit your program's needs.

Common configuration tasks include the following:

- Adding nets to the Comm Plan
- Adding or editing clients
- Adding or editing radios

To learn more about these custom configurations, go to the *Voisus Solo User Guide*.