



# AI-S Technical User Guide



Product Name: AI-S

AI-S Technical User Guide

© Copyright ASTi 2020

Restricted rights: copy and use of this document are subject to terms provided in ASTi's Software License Agreement ([www.asti-usa.com/license.html](http://www.asti-usa.com/license.html)).

ASTi

500A Huntmar Park Drive

Herndon, Virginia 20170 USA

# Revision history

Date	Revision	Version	Comments
3/6/2018	B	0	Converted existing documentation into XML. Update "Status indicator lights."
12/14/2020	C	0	Updated the restricted rights copyright statement in the front matter; updated the manual's cover page, table styles, and section header styles.

# Contents


<b>1.0 ASTi Interface-Single (AI-S)</b> .....	<b>1</b>
<b>2.0 Specifications</b> .....	<b>2</b>
2.1 Serial connections .....	3
2.2 Audio input and output .....	4
2.2.1 Audio interface pinout .....	4
2.3 Status indicator lights .....	5
<b>3.0 Control inputs and digital outputs</b> .....	<b>6</b>
3.1 Control inputs .....	6
3.1.1 Control input as digital input .....	6
3.1.2 Control input as analog input .....	7
3.2 Digital output .....	7
<b>4.0 Memory devices</b> .....	<b>8</b>
<b>5.0 Temperature and humidity ranges</b> .....	<b>9</b>
<b>6.0 Typical headset settings</b> .....	<b>10</b>
<b>Appendix 3: Warranty information</b> .....	<b>11</b>
3-1 Repairs and returns .....	11



## 1.0 ASTi Interface-Single (AI-S)

The AI-S is a compact audio and I/O distribution device that connects local or remote operator headsets, speakers, control panels, and other peripherals to the network via Ethernet.

Figure 1, "AI-S hardware diagram" below shows an example of an AI-S network configuration:

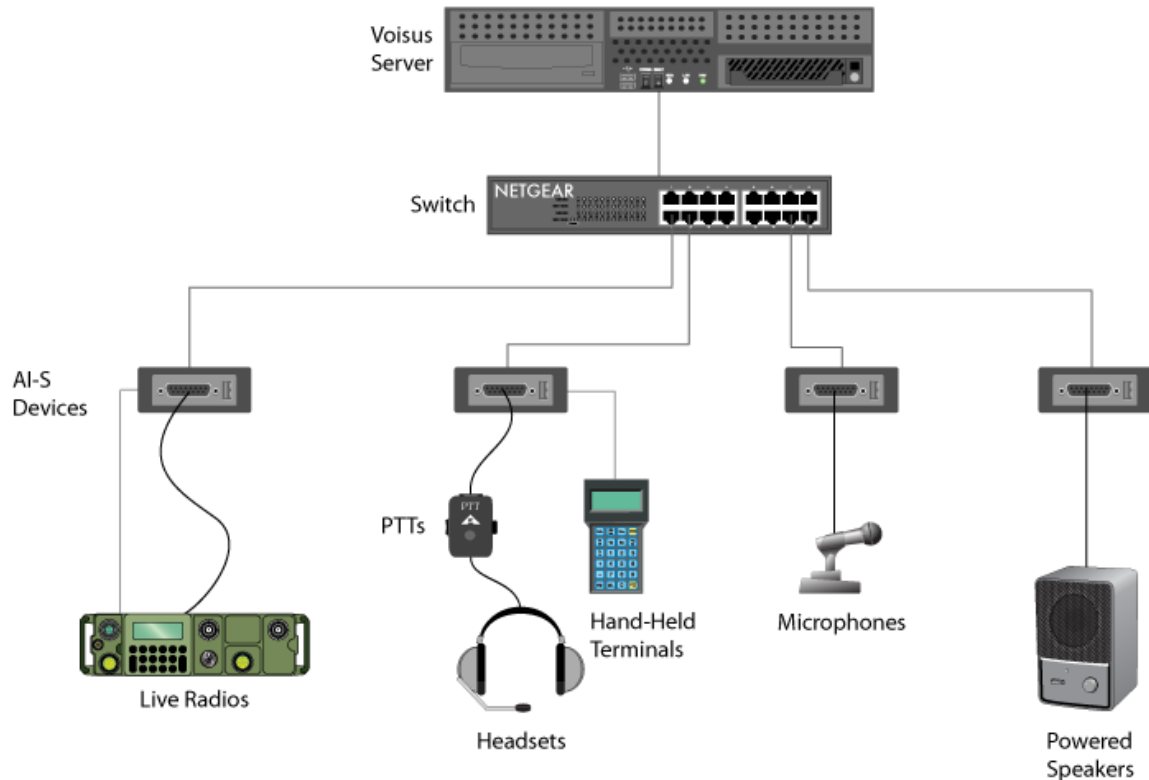

*Figure 1: AI-S hardware diagram*

The AI-S includes the following features:

- *Stereo support:* supports stereo operation (i.e., independent left and right output) on a single connector, reducing cabling complexity.
- *Reduced footprint:* takes up little space and fits easily on a desktop.
- *Software-configurable:* includes adjustable preamplifier gains and sidetone for easy, direct connection to a variety of audio or communications systems and peripherals.
- *Integrated I/O:* includes configurable digital and analog I/O for direct connection of PTT units, volume controls, switch detection, radio PTT activation, and other control applications.
- *Serial data port:* provides a convenient control interface for ASTi handheld terminals (HHTs), simulated panels, and live radio control.


## 2.0 Specifications

The AI-S has the following specifications:

<b>Weight</b>	A packaged AI-S weighs 5 oz.
<b>Power Source</b>	Ethernet port via Power over Ethernet (PoE)
<b>Power Consumption</b>	<10 w @ 56 VDC
<b>Mean Time Between Failure (MTBF)</b>	1,970,288.06 hours

*Figure 2: AI-S specifications*

On the front panel, the AI-S has one DB-15 connector and a USB port:

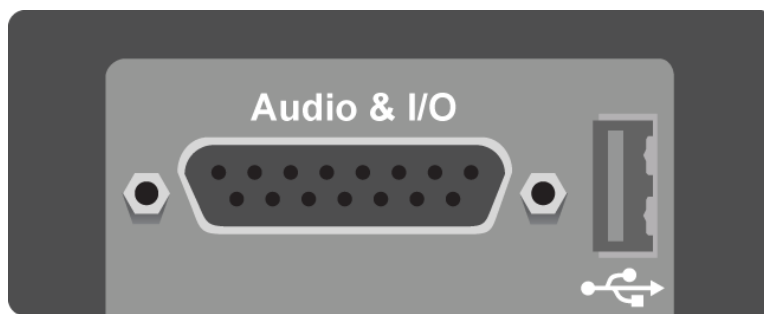

*Figure 3: AI-S front panel*

On the rear panel, the AI-S has a serial port and a Power over Ethernet (PoE) port:



*Figure 4: AI-S rear panel*



The AI-S's dimensions are 4.86" L × 2.965" W × 1.17" H, as shown in Figure 5, "AI-S dimensions" below:


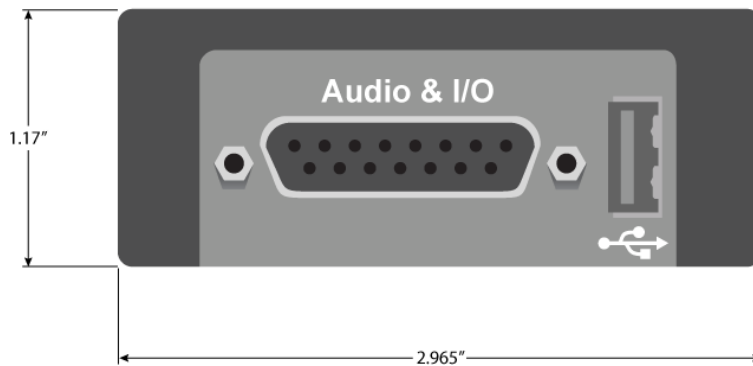


Figure 5: AI-S dimensions


## 2.1 Serial connections

The AI-S includes the following serial connections:

- *RJ-12 pinout for RS-422 mode:*

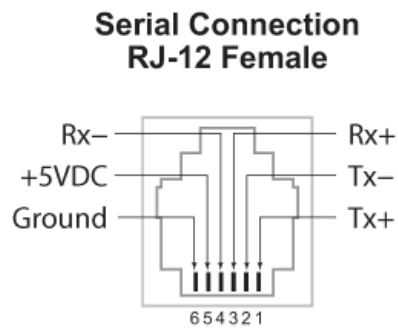


- *RJ-12 pinout for RS-232 mode:*

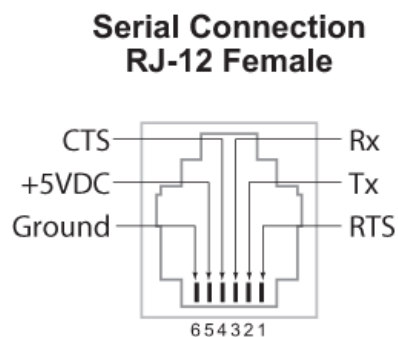



## 2.3 Status indicator lights

The LED status indicator light displays the AI-S's status:

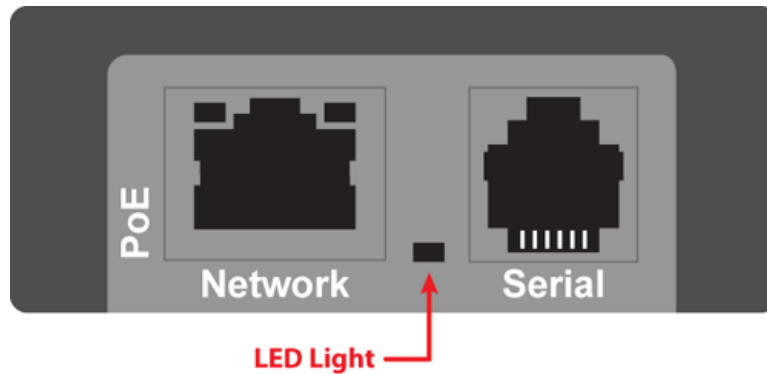

*Figure 7: AI-S status indicator lights*

Figure 8, "AI-S status indicator lights" below defines each status indicator light for the AI-S:

LED Light	Status
Blue solid	The AI-S is in boot mode.
Blue flash	The AI-S is in boot mode and is not connected to the server.
Green flash	Normal operation.

*Figure 8: AI-S status indicator lights*

## 3.0 Control inputs and digital outputs

The following sections describe the AI-S's control inputs and digital outputs, explaining how to use the control input as a digital input, an analog input, or a digital output.

### 3.1 Control inputs

The control inputs are contact-sensing; no voltage is required. Simply connect the control input and control input ground lines together using a switch or other suitable device, such as a press-to-talk (PTT) device. The control input can logically function as either a digital or an analog input.

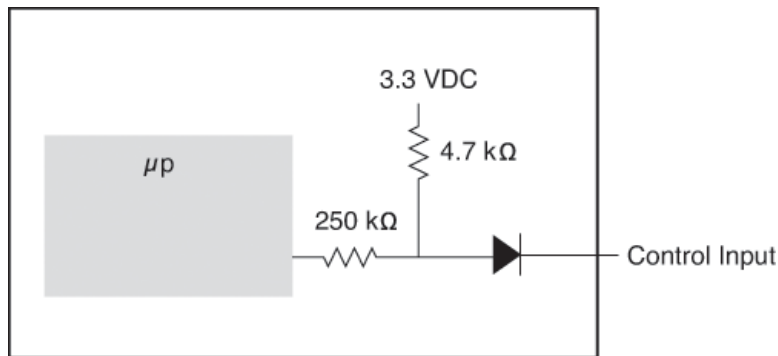


Figure 9: Control input circuitry

#### 3.1.1 Control input as digital input

To use the control input as a digital input, simply short or open the required pins. For example, if you short Pins 9 and 10, Control Input 1 is True. If the pins are open, Control Input 1 is False. In this example, the control input acts like an on and off switch.

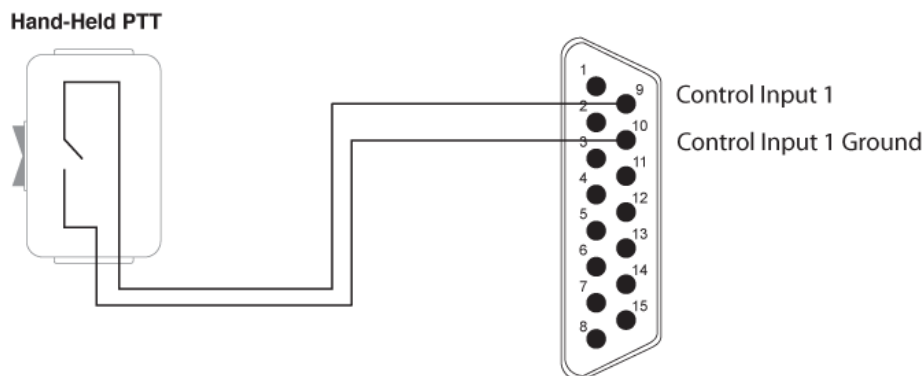


Figure 10: Digital In

### 3.1.2 Control input as analog input

To use the control input as an analog input, insert a resistance between the control input and control input ground pins. The four-channel selector knob, for example, contains a switch that changes the resistance between the control input and control input ground pins.

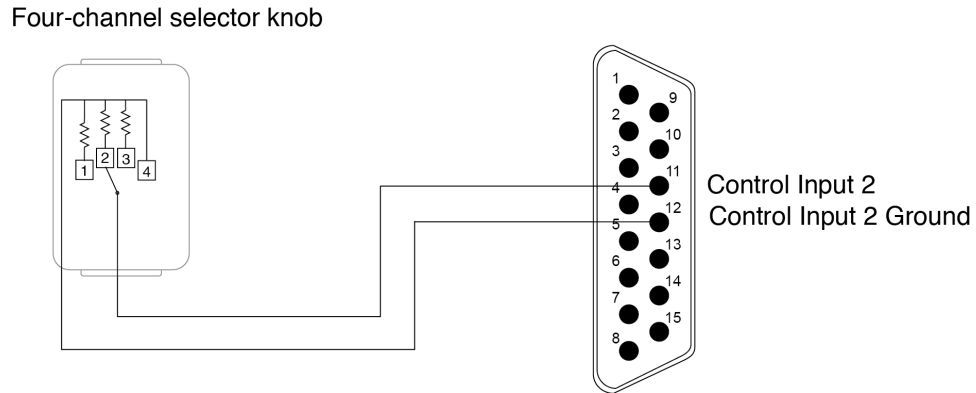


Figure 11: Analog In

### 3.2 Digital output

The digital output circuitry consists of an opto-isolated, solid-state relay for switching power to external loads. Table 3, "Digital output rating and dissipation" below summarizes the AI-S's digital output opto-isolated field effect transistor (FET) values:

Type	Opto-isolated FET
Maximum continuous current rating	120 mA
Maximum power dissipation	300 mW

Table 3: Digital output rating and dissipation

Figure 12, "Digital output circuitry" below shows the AI-S's digital output circuitry:

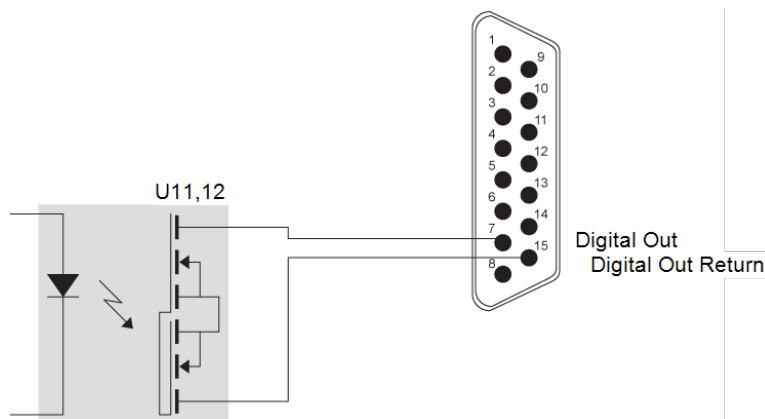


Figure 12: Digital output circuitry

## 4.0 Memory devices

Table 4, "AI-S memory" below summarizes AI-S devices with volatile and nonvolatile memory. Volatile memory is erased when you unplug the device, while nonvolatile memory is retained.

Type	Size
<b>Volatile</b>	
MCU Internal SRAM	96 kB SRAM
SDRAM	8 MB
<b>Nonvolatile</b>	
MCU Internal	512 KB

*Table 4: AI-S memory*

## 5.0 Temperature and humidity ranges

Table 5, "AI-S temperature and humidity ranges" below summarizes the AI-S's temperature and humidity ranges:

Range Type	Suggested Range
Operating temperature	+10°C to +32°C (50°F to 90°F)
Operating max. temperature gradient	20°C (68°F) per hour
Operating humidity	10–70 percent noncondensing
Storage temperature	0°C to 55°C (32°F to 135°F)
Storage max temperature gradient	30°C (86°F) per hour
Storage humidity	5–95 percent
Max altitude	2,000 meters

*Table 5: AI-S temperature and humidity ranges*

## 6.0 Typical headset settings

The AI-S supports a mono or stereo headset connection for the DB-15 connector. Figure 13, "Mono headset connection" below shows a typical mono headset connection for the AI-S:

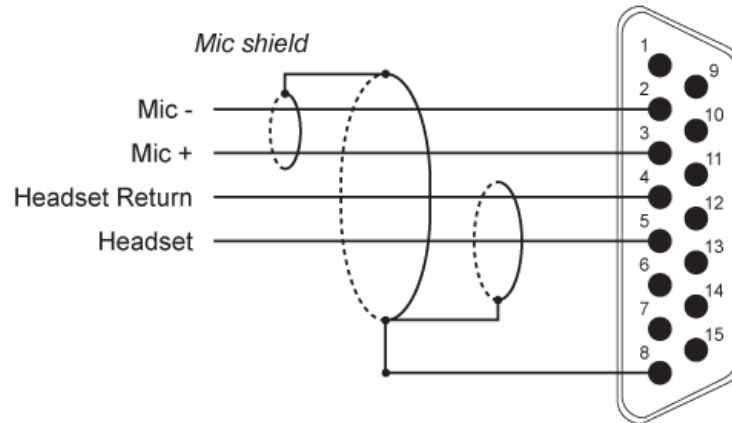


Figure 13: Mono headset connection

Figure 14, "Stereo headset connection" below shows a typical stereo headset connection for the AI-S:

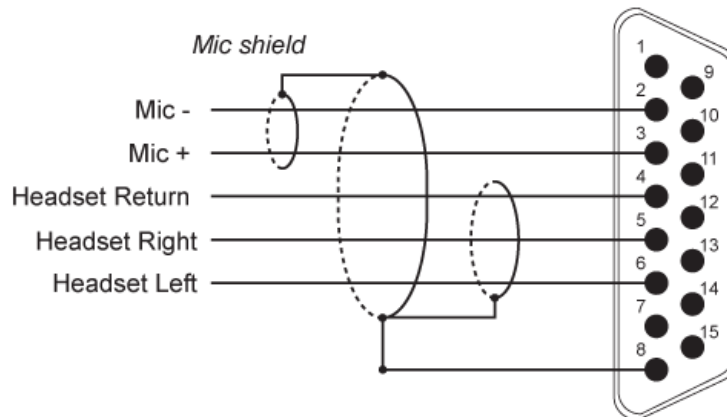


Figure 14: Stereo headset connection



## Appendix 3: Warranty information

To view ASTi's warranty, go to “Standard Terms and Conditions” at [www.asti-usa.com/legal/terms.html](http://www.asti-usa.com/legal/terms.html).

### 3-1 Repairs and returns

To return equipment to ASTi, observe the following procedures:

1. Request a Return Material Authorization (RMA) number through the form on the RMA User Account at [rma.asti-usa.com/rma](http://rma.asti-usa.com/rma). ASTi's Production department cannot receive a repair without an RMA number. The shipping label must also include the RMA number. Any items received from customers without RMA numbers or appropriate contact information will not be tested. After 60 days, ASTi reserves the right to scrap all hardware received in this condition.
2. When packaging the equipment in question, make sure it is well-protected. Failure to properly package the equipment during shipping could void the warranty.
  - Always double-box the device.
  - The inner container should employ some semi-rigid, contour-fitting foam, while the exterior container should use a more pliant, shock-absorbing material, such as styro-foam peanuts.
  - To prevent possible Electrostatic Discharge (ESD) damage, properly enclose the device in an antistatic bag.
3. Do not send accessory pieces, such as rack mount kits, power supplies, or software. Only include items that do not work.
4. Describe the problem, noting the following information:
  - Serial number for the unit in question
  - Point of contact information (i.e., name, telephone number, and equipment return address)

Failure to include this information could extensively delay the return of equipment.

5. If you are an international customer, include the correct product value on all shipping documents. For proper harmonized tariff codes, contact ASTi. The customer is responsible for duties, taxes, and fees incurred during shipment.

ASTi evaluates equipment free of charge and will not start work without prior customer approval.

You are responsible for shipping charges to ASTi for warranty and non-warranty repairs. If equipment is not under warranty, a purchase order is required to cover any repairs. ASTi will provide a quote for all nonwarranty items, including return shipping. The customer is responsible for return shipping charges on nonwarranty equipment. ASTi ships equipment still under warranty back to the customer via FedEx, unless otherwise directed. ASTi is responsible for return shipping charges on domestic items under warranty.

If ASTi does not receive the equipment 30 days after the RMA was issued, ASTi closes the RMA and designates it as unused.